

FLAT BACKS




7330-F2



7330-F8

Code	For digital/dial indicators
7330-F1	2311
	2301 2302 2308 2309 (except 2309-30, 2309-30F)
7330-F2	2313 2314 2316 2324 2801
	2103 2104 2108 2109 2112 2113

Code	For digital/dial indicators		
7330-F5	2115 2116 2117 2118 2120 2501		
	7330-F6	2318	
	7330-F7	2830 2882 2885 2888 2889 2891 2892	
		7330-F8	2890 2887
		7330-F9	2886
7330-F10		2310	

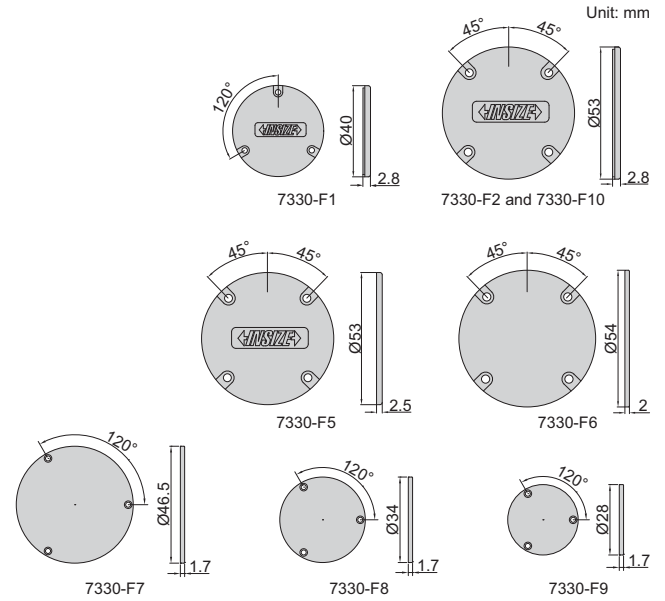

LUG BACKS



7330-L2



7330-L8

Code	For digital/dial indicators
7330-L1	2311
	2301 2302 2308 2309 (except 2309-30, 2309-30F)
7330-L2	2313 2314 2316 2324 2801
	2103 2104 2108 2109 2112 2113

Code	For digital/dial indicators		
7330-L5	2115 2116 2117 2118 2120 2501		
	7330-L6	2318	
	7330-L7	2830 2882 2885 2888 2889 2891 2892	
		7330-L8	2890 2887
		7330-L10	2310

